


## Operation (MAG / AP):

- To remove your magnetic Cold Air Return Grill / Ceiling Vent Register / Access Panel Cover, simply press on the bottom 2 corners of the insert and the top will tilt out for you to grab and remove

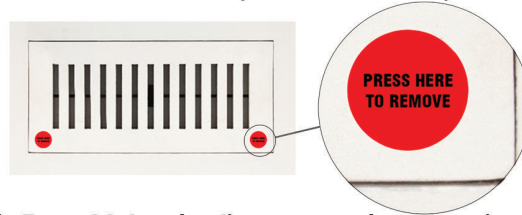

**Recommended Drywall Compound: Dura90 for the first coat only, or equivalent**

## Permanent Installation for CA's:

- Locate area of installation, either close to the floor or near the ceiling
  - o Position angled slots accordingly, to avoid seeing into the opening
  - o Use a level for best results
- Cut away drywall to ensure all sides of the Cold Air Return cover will fit within the wall to mount flush
- When installing, the primed side with the routed edge is the finished side, and you should see this side while you are installing the piece
- Simply air nail or finishing nail into the studs (if using screw, pre-drill and counter sink the holes)
- All fastening hardware should be installed lower than the finished face to allow for drywall finishing
- Tape and Mud the gap and routed edge around the entire vent cover and the drywall (feather away from the grill, not towards it)
  - o If you're concerned with the slots getting drywall compound in them, you can lay painters tape over the slotted area, and then remove it after mudding is complete
- Once drywall compound is dry, sand it, (you may or may not need to do a second pass of compound), remove the dust, prime and paint to your wall colour

## Removable Installation for MAG's and AP's:

- Locate area of installation, either close to the floor, near the ceiling, or the area you need access to
  - o Position angled slots accordingly, to avoid seeing into the opening
  - o Use a level for best results
- Cut away drywall to ensure the back of the metal frame will fit inside the opening
- ***\*\*With the air return grill/access panel in the frame (so the frame doesn't twist/warp during install), using standard drywall screws, screw the metal frame into the drywall and studs\*\****
  - o Add wood behind the frame and drywall for better fastening
- After the frame is secure, remove the air return grill/access panel (so it doesn't get drywall compound on it)
  - o For a MAG 4x10 bend back the diffuser flaps for desired air flow
- Mud the frame into the wall, making sure to mud up to the raised edge of the frame
- Once drywall compound is dry, sand it, (you may or may not need to do a second pass of compound), remove the dust, prime and paint to your wall colour
- The grill/access panel is already primed, and just needs to be painted to your wall colour
  - o For best results, use a spray gun for painting the grill

**Don't forget to place your furnace sticker on your furnace!**

**If you have any questions or need additional information:**

**Please Email us at [info@made2match.ca](mailto:info@made2match.ca) or Call us at 1-877-636-1113 or 905-847-2424 locally**